MB-4 v1.40 Update

 
In order to update your MB-4 to v 1.40, please click on the link below to download the zipped file.

https://drive.google.com/file/d/1IzvyZwIKqfJPOMI-BUxmbY9nxnUfREge/view?usp=sharing Click the word



"Download" or the download arrow in the upper right corner of the window:

Once downloaded 🔒 v 1.40 Update Files.zip , please unzip the file 🎍 v 1.40 Update Files and open the folder.



Inside of the folder are the update files inf

you will need to copy these files onto a clean USB

stick, these files should not be copied/pasted inside of the EMB/Embf folders.

After the files are on the USB stick, you will need to start the MB-4 in update mode:

3. Start up your MB-4 and RCS in Update Mode.

Insert the media into the PC Card Slot or USB Port of your RCS.

Press and hold the **Trace Outline button** and the **Left Jog button** on the MB-4 at the same time and turn the power switch ON.



Be sure to keep the buttons pressed for at least 3 seconds until the LCD screen shows the pale blue background.



4. Updating Process

The **Color Bar** will appear on the RCS's LCD screen and the updating process will automatically start.



The LCD screen on the RCS will turn blue and show "Finish" when updating is complete.

It will take approximately 10 minutes to complete the updating process. Do not turn the power switch OFF, disconnect the media or press any buttons/keys while the updating is in progress.



Notes: Avoid using large capacity media already storing a large number of folders and files. It may take an hour or more to finish the updating process if you use such media.

5. Restarting your MB-4 with RCS

After the updating is completed, turn the power switch OFF. Wait for 5 seconds and turn it ON again.

Check the LCD screen on the RCS to see whether the Version Number in the opening window has changed.



Confirming the Customized Settings

Your customized settings have retained after updating, however the settings of selecting the thread brand and ignoring short stitches will change since more options are available in these settings.

Press the SET key and open the following setting mode windows to select your previous settings.

- [SET5] Thread Selection
- [SET6] Ignore Short Stitches

If you wish the all the settings have set to defaults (factory setting), select Reset all to defaults in the [SET3] window and press the **circle** key next to "Yes".

SET5			
•	Thread selection		
	Janome		
	Gutermann SULKY	Rayon 40	
	Madeira	Polyneon 40	
	Madeira	Rayon 40	k i
	Robison-Anton	Polyester 40	
	Robison-Anton	Rayon 40	
	Mettler	Poly Sheen	
	Pearl Yacht	Rayon	

SET6		
	Color Control	+
	✓ Reminder to Start	
	Reserve Color to Needle	
•	Ignore Short Stitches OFF +	

6. Troubleshooting

If the update could not be completed, please check the followings:

- Make sure the media (ATA PC Card or USB Memory Key) is properly inserted.
- Make sure the updating file has been properly copied to the media.
- Make sure you have not turned the power switch OFF or disconnected the media from the machine before updating was finished.

After checking the above points, try again from step 2.Prepare to Update.

If you still can not complete the updating process, please contact your nearest Janome dealer.